



DIGITAL SOLAR POWER CONTROLLER / MONITOR **INSTALLATION & OPERATION MANUAL**

The Ideal Charge Controller for Home, RV & Marine Solar Systems

The Sunsei™ CC20000D is a highly reliable charge controller that is ideal for the Sunsei™ SolarCharger SE-4000, SE-6000 and SE-8000 solar panels. It will efficiently charge your batteries and provide years of protection from overcharging. This protective care will prolong your battery life and reduce maintenance requirements.

FEATURES

IDEAL SOLAR CHARGING

- **Compatible** – Works with almost all types of batteries and solar panels
- **Efficient** – Over 95% efficiency when charging
- **Full Charging** – Ensures that the batteries are always topped off
- **Battery Safe** – Charging method maximizes battery life
- **Reduced Maintenance** – From healthy charging and reliable operation

OVER-CHARGE PROTECTION

- **High Voltage “Shut-off”** – Shuts off only when battery is full
- **Robust Circuitry** – Control function 100% solid state

HIGH RELIABILITY

- **Simple, rugged electronics** – Low component count and streamlined design ensure long-term reliability
- **No Minimum Voltage Required** – Can charge a dead battery

FEATURES

- **Digital Voltage and Current** – Accurate readout for battery and solar panels
- **Status Lights** – Colored BATTERY condition bar-graph with “CHARGING” and “CHARGED” lights
- **Adjustable Set-point** – Easily adjusts to higher or lower voltages
- **Reverse leakage protection** – Prevents power loss at night.
- **Over-current & Incorrect Wiring Protection** – ARRAY and BATTERY fuse
- **Terminal Block** – For sound and easy wire connections
- **Mounting Options** – Can mount flush or onto a wall (with accessory)
- **Environmental Protection** – Front plate and circuitry have moisture protection

SYSTEM COMPATIBILITY

- **Minimum RF Noise** – Low-switching frequency minimizes electronic noise
- **Protection from External RF Noise** – Can operate with noisy inverters



ICP Solar Technologies
Montreal, Canada
T-1 514.270.5770


Specifications

PARAMETERS	UNITS	Sunsei™ CC20000D
Nominal Voltage	Volts	12
Array Voltage, Max (Voc)	Volts	26
Charging Current, Continuous (Isc)	Amps	20
Charging Current, Max (60 seconds)	Amps	25
Operating Voltage at Battery, Min		
Charge Control	Volts	0
LCD Metering	Volts	7.8
LED Bar-graph	Volts	10.5
Current Consumption		
Quiescent (Tare)	Milliamps	8.8
Charging (with LED Bar-graph off)	Milliamps	<30
LED Bar-graph	Milliamps per LED	5
Charge Termination, Factory Set (1)	Volts	14.4 ± .2
Charge Termination, Adjustable Range (2)	Volts	13.6 – 15.3
Charge Resumption, Factory Set (2)	Volts	13.0 ± .2
Voltage Drop, Array to Battery		
Controller	Volts per Amp	0.05
Controller and 2 fuses	Volts per Amp	0.08
LCD Meter Accuracy		
DC Voltage		0.5 %
DC Current		1 %
Operating Temperature Range	°C (°F)	-30 to 50 (-22 to 122)
Storage Temperature Range	°C (°F)	-40 to 70 (-40 to 158)

4x7 BOX (ACCESSORY)
In Inches (cm)

Notes:

- (1) This is not a constant voltage controller. The batteries will drop below this voltage when completely charged.
- (2) The Charge Termination / Resumption span is fixed. The Resumption set-point changes as the Termination set-point is adjusted.

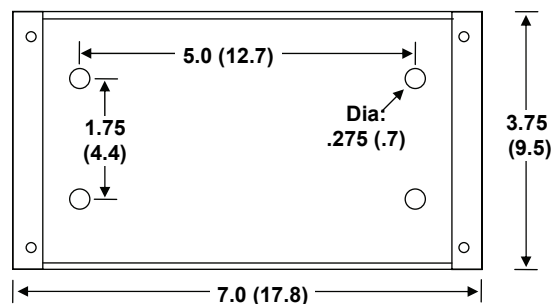

CERTIFICATIONS

Not all units are certified. Refer to logos on product (back) for certifications.



Recognized by Underwriters Laboratories (UL)

Meets all requirements for UL 1741.

RELATED SYSTEM EQUIPMENT

The Sunsei™ CC20000D is an integral part of a solar electric power system that includes a solar panel, a battery and a load.

SOLAR PANELS - (“photovoltaic (PV) array”, “solar modules”):

The Sunsei™ CC20000D is compatible with all makes and models of photovoltaic solar panels.

The entire solar array’s open circuit voltage (Voc) cannot exceed 26 volts (the sum of the Voc of all solar panels in series). Also, the solar array’s short circuit current (Isc) cannot exceed 20 amps. (This is the sum of the short circuit currents (Isc) of all the solar panels in parallel).

Install all panels with the correct series-parallel configuration to insure proper system voltage (12 volts) and current.

The Sunsei™ CC20000D includes a blocking diode to eliminate leakage of the battery power into the solar panels at night. No additional protection is needed.

OTHER CHARGING SOURCES: Systems with an additional source of charging (alternator, battery charger, etc.) can operate with a solar array and a Sunsei™ CC20000D. All charging sources need to connect directly to the battery on independent lines and have their own form of over-charge protection.

Sunsei™ CC20000D FOR NON-SOLAR APPLICATIONS: These units will only operate with solar electric panels. Do not use to regulate other power sources, such as a hydro or wind generators/alternators or AC battery chargers. These charging sources can damage the controller and/or the generating equipment because the Sunsei™ CC20000D stops charging by short-circuiting the input.

BATTERIES: The Sunsei™ CC20000D provides the proper charging of standard lead-acid batteries that are normally used in recreational vehicles, boats and remote stand alone systems. These include wet cell batteries (with filler caps), sealed, maintenance-free and gel-cell batteries. Automobile batteries can also be charged, but these batteries are rarely used as the primary battery in a solar system. Install all batteries with the correct series-parallel configuration to insure proper system voltage and current.

SYSTEMS WITH TWO BATTERY BANKS: When solar charging two *separate* battery banks, a switch can be installed to allow manual selection of one battery or the other.

BATTERY ISOLATORS: In installations that use a diode battery isolator with two batteries, the Sunsei™ CC20000D needs to connect directly to one of the batteries or an output from the isolator. The Sunsei™ CC20000D will not operate if it is connected to the input of the isolator.

LOADS: System loads such as lights, radios and DC/AC inverters must be 12 volts DC (unless an inverter is being used).

INSTALLATION

WARNINGS

WARNING: Electricity, even low voltage electricity, can be dangerous. Installation should be performed by a licensed electrical contractor or other qualified personnel only. The requirements of National Electrical Codes should be followed.

WARNING: Follow all safety precautions of the battery manufacturer. Proper ventilation must be provided for the batteries. Most batteries produce hydrogen gas when charging, which is extremely explosive. Provide adequate battery ventilation. **DO NOT** expose the battery to open flame, matches, cigarettes or sparks.

CAUTIONS (*The following can cause a fuse to blow and may damage the unit*)

CAUTION: DO NOT EXCEED THE UNIT'S VOLTAGE AND CURRENT RATINGS

- **Do not** exceed the maximum open circuit voltage (voc) rating of 26 volts. This is the sum of the Voc of all solar panels in series.
- **Do not** exceed the maximum current rating 20 amps. This is the sum of the short circuit currents (Isc) of all the solar panels in parallel.

CAUTION: DO NOT DEVIATE FROM THE RECOMMENDED WIRING INSTRUCTIONS:

- **Do not** reverse BATTERY (+) and BATTERY (-) connections to the Sunsei™ CC20000D. Any reverse polarity to the battery may damage the unit.
- **Do not** reverse the BATTERY and Solar ARRAY connections to the Sunsei™ CC20000D. A battery connected to the array terminals may damage the unit.
- **Do not** connect the array directly to the battery when the array is connected to the Sunsei™ CC20000D at the same time. This will cause the fuse to blow when the battery reaches full charge voltage.
- **Do not** wire the Sunsei™ CC20000D in such a way that it can be connected to an alternator (or other charging source) while the battery is disconnected. Other charging sources should have independent connections to the battery.
- **Do not** wire the Sunsei™ CC20000D in such a way that it can be connected to a load without a battery connected. (Example: Do not connect the loads directly to the Sunsei™ CC20000D BATT terminals. This may damage the controller if the battery is disconnected.)

INSTALLATION INSTRUCTIONS

1. MOUNTING CONSIDERATIONS

The Sunsei™ CC20000D is designed to be mounted flush against a wall. It can be mounted onto a wall by adding the optional knockout box (4x7 BOX). Flush mounting or wall mounting require different installation and mounting considerations.

FLUSH MOUNT: The flush mounted unit requires a rectangular cutout in the mounting surface with sufficient space (2-3 inches) immediately behind to accommodate the controller.

WALL MOUNT: The wall-mounted unit (Sunsei™ CC20000D with the 4x7 BOX) is installed onto a wall surface using four mounting screws. Electrical connections are made through knockouts in the box to the back of the controller. Wiring can be run down the wall or through a hole in the wall directly below the controller.

2. ACQUIRE TOOLS AND MATERIALS

TOOLS AND MATERIALS NEEDED:

- Slotted screwdriver
- Wire cutter/strippers
- Keyhole saw or saber saw
- Pencil, scratch awl or other marker
- Wire of proper gauge to run from the panels, to the Sunsei™ CC20000D, to the battery (See **INSTALLATION INSTRUCTIONS 6: WIRE TYPE / SIZE**)
- Mounting fasteners of appropriate type for wall material
- Included are four 3/4 - #6 screws and a spare fuse, 25 amp AGC for the Sunsei™ CC20000D

Also for Flush Mounting:

- Drill with 3/32" and 3/8" bits

Also for wall mounting: (Sunsei™ CC20000D with 4X7 BOX):

- 1/2 inch Romex strain relief clamps

3. LOCATION

The Sunsei™ CC20000D should be mounted where it can be easily seen and reached as needed. Carefully consider how the wires are to be run from the solar panel to the controller and from the controller to the battery. The Sunsei™ CC20000D should be mounted as close to the battery as possible, and should be mounted on a vertical surface to aid in cooling.

4. PROTECTION REQUIREMENTS

The unit should be mounted indoors, out of the weather, unless a weatherproof enclosure is used. Avoid mounting in direct sunlight or in a hot environment or where exposed to excessive moisture. Locations near refrigerators may pose a moisture problem.

INSTALLATION INSTRUCTIONS (continued)

5. PREPARE THE LOCATION PRIOR TO WIRING

FLUSH MOUNT: Use the template provided to position and mark the cutout and the four mounting holes. Make the cutout using a keyhole or saber saw. Start by drilling holes in the corners, and then saw between the holes.

WALL MOUNT: Mount the knockout box to the wall using suitable fasteners.

6. SELECT WIRE

WIRE TYPE: When possible, use stranded wire instead of solid wire. Stranded wire does not fatigue and cause loose connections over time as easily as solid wire. Use red wire for (+) and black for (-).

WIRE SIZE: Refer to the "WIRE SIZE" chart below to determine the minimum size wire needed for each connection. Note that the bigger the wire, the lower the AWG. When using large stranded wire, you may need to divide the ends into two groups and straddle the screw on the terminal block.

Sunsei™ CC20000D: Accepts one wire at 6 AWG (stranded) or two wires at 8 AWG.

Large Wires: To connect large wires to the Sunsei™ CC20000D, use crimp connectors or connect the larger wire to a short, thinner wire using a wire nut (solder these connections).

Wire Size: Minimum wire gauge (AWG) - (based on maximum current)									
Model	Battery Connection				Solar Array Connection				
	Distance round trip (feet/meters)				Distance round trip (feet/meters)				
	10'/3m	20'/6m	30'/9m	40'/12m	10'/3m	20'/6m	30'/9m	40'/12m	
Sunsei™ CC20000D	10	8	6	4*	12	10	8	6	

* Wire gauge larger than unit can accept directly. See WIRE SIZE / Large Wires above.

7. COMPLETE THE INSTALLATION OF PANELS, BATTERY AND LOAD

Follow the manufacturer's instructions for mounting and wiring the solar panel, batteries and the load. Install with the correct series-parallel configuration to insure proper system voltage and current.

8. REMOVE POWER FROM BATTERY / PANELS (if needed)

Before running the wires to the Sunsei™ CC20000D be sure that power is disconnected from the batteries and panels.

9. RUN SYSTEM WIRING

After disconnecting the power sources, run the wires from the battery and solar panel to the location selected for the controller.

WALL MOUNT: Run the array and battery wires into the box through the knockouts, using a 1/2 inch Romex cable clamp for strain relief.

INSTALLATION INSTRUCTIONS (continued)

10. NOTE WIRE POLARITY

Make sure to correctly mark the polarity of the wires using colored wires or tags. Incorrect polarity may blow a controller fuse or damage the Sunsei™ CC2000D.

CAUTION: Some vehicles or solar kits use black and white wires for connection to the battery. These kits will label the black wire as battery negative and the white wire as battery positive (please verify with your manual). Black and red wiring systems will label the black wire as negative and the red wire as positive. When these systems interconnect, the black wire does not connect to the black wire.

CAREFULLY NOTE BATTERY POLARITY AND WIRE COLORS!

11. PREPARE WIRES

Using a wire stripper, carefully remove approximately ½ inch of insulation from the controller end of each wire, being careful not to nick or break any wire strands.

12. Sunsei™ CC2000D CONNECTION

Wire the Sunsei™ CC2000D according to **Figure 1**. The wires should be connected directly to the Sunsei™ CC2000D screw terminals (no spade or ring lugs). Tighten securely.

Any wiring variation can affect the performance and operation of the system.

CAUTION: The two negative connections (ARRAY (-) & BATTERY (-)) must be separated. Do not install a jumper across the terminal block.

CAUTION: The battery negative connection should not come from a frame or chassis. This wire needs to originate directly from the battery.

CAUTION: Do not connect any loads to the Sunsei™ CC2000D terminals.

13. INSTALL FUSING AS NEEDED

Add circuit protection where needed. A 25 amp fuse and disconnect switch should be installed on the BATTERY (+) run of the Sunsei™ CC2000D.

WARNING: A good system design calls for circuit protection to be added to all wire runs from the battery. This will provide protection from fire and damage due to over-current from the battery. Also, disconnect switches in-line between the components allow you to isolate power during installation and maintenance. Recommended: Install properly DC rated, high interrupt, current limiting, over-current protection and disconnect equipment between the Sunsei™ CC2000D and the battery. Refer to the National Electrical Code or your local alternative energy vendor for recommendations.

14. Sunsei™ CC2000D MOUNTING

Mount the Sunsei™ CC2000D to the wall or box front using the four screws provided, or other suitable fasteners. Do not remove the four rubber spacers, they provide a gap for added cooling.

INSTALLATION INSTRUCTIONS (continued)

15. RECONNECT BATTERY AND ARRAY POWER

16. OPERATION

Operation of the charge controller is now fully automatic. If the battery voltage is below the Full Charge Termination set-point (14.4 volts) and power is available from the array, the Sunsei™ CC20000D should start up “CHARGING”.

17. CHECK FOR VOLTAGE DROP (OPTIONAL)

Once the system is installed and operational, a check on the connections is recommended. A poor connection will result in a voltage loss that will distort the battery voltage reading and cause the charging to stop too soon. To check the onnections, an accurate voltmeter is required, The Sunsei™ CC20000D must be charging with maximum expected charge current (very sunny conditions).

Battery Connection: First, note the voltage at the battery. Then, immediately note the voltage at the Sunsei™ CC20000D battery terminals. Ideally, the difference in voltage should be no more than $\frac{1}{4}$ volt.

Array Connection: Note the voltage at the panel. Then, immediately note the voltage at the Sunsei™ CC20000D Array terminals. Ideally, the difference should be no more than $\frac{1}{2}$ volt.

If the voltage drop is more, suspect crimp connections that have not been soldered, in-line fuses or fuse holders, or loose terminals. If no location of voltage drop is found, consider using larger wires (or double up the wires) for your run.

Example: You record these readings:

Battery terminals:	13.65 volts
Sunsei™ CC20000D battery connection:	13.95 volts → “.30 volt difference too large. Decrease voltage drop”
Sunsei™ CC20000D panel connection:	14.10 volts
Panel(s):	14.30 volts → “Connection OK”

FIGURE 1 Sunsei™ CC2000D CHARGE CONTROLLER


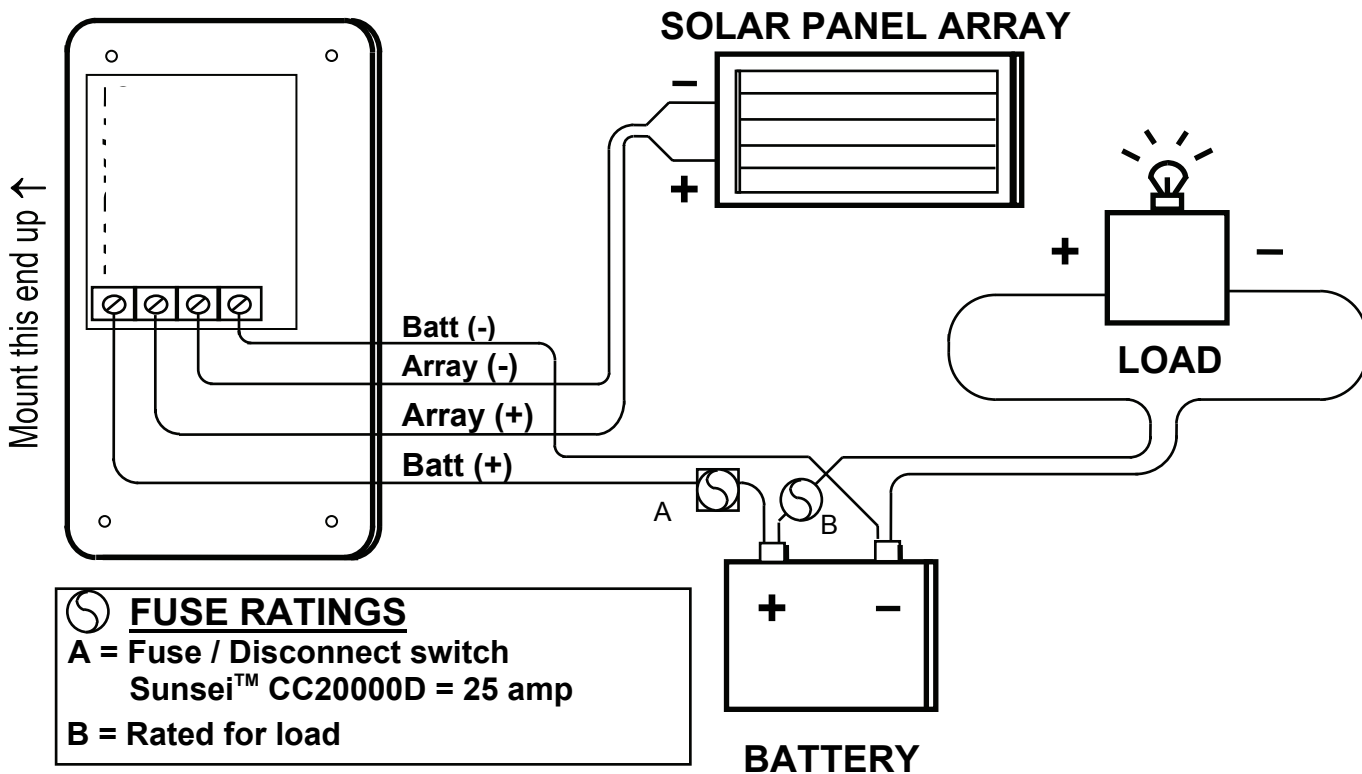


FIGURE 2 Sunsei™ CC2000D - BACK VIEW

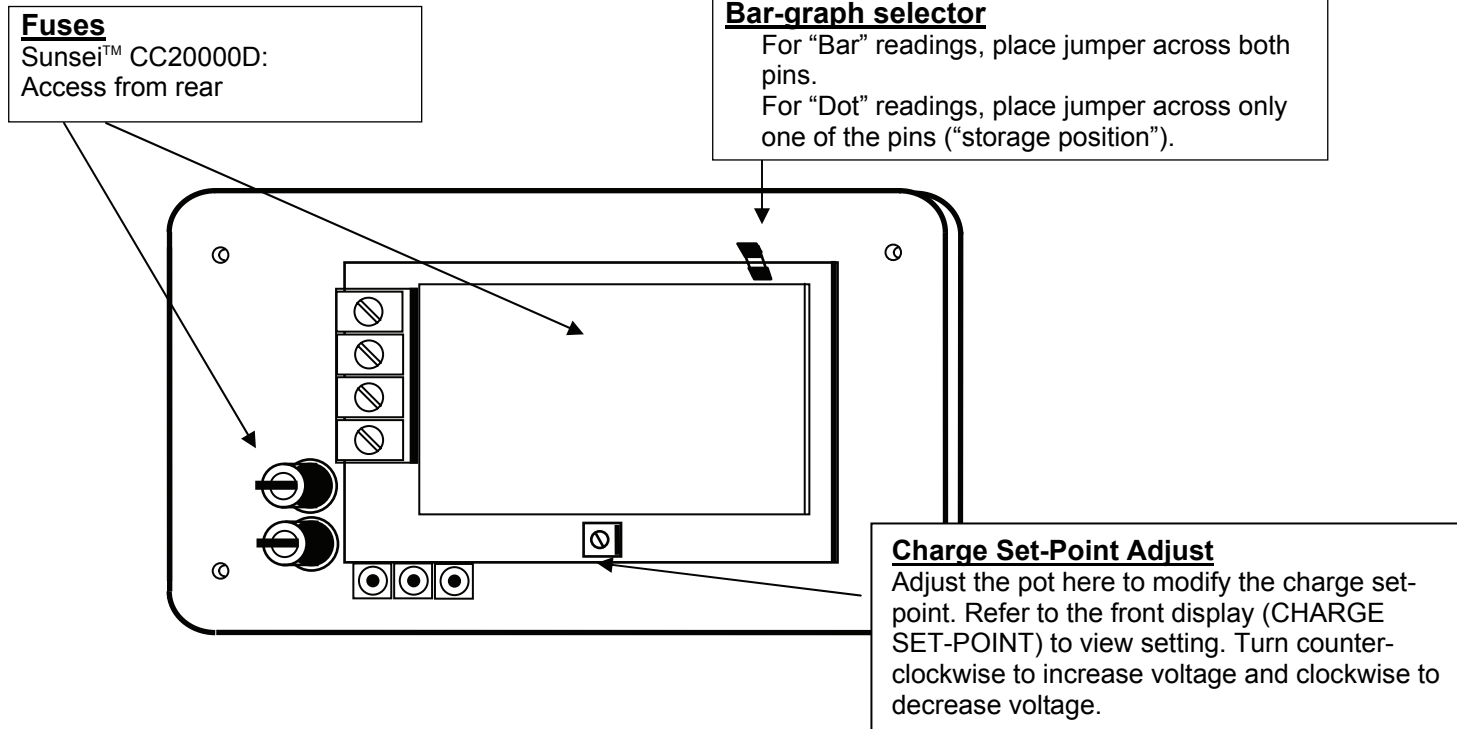

OPERATION

The operation of the Sunsei™ CC20000D is completely automatic. This controller will regulate the charging of batteries during conditions of heavy usage, or when left unattended for long periods of time. During operation, it is normal for the front plate to feel warm.

CHARGING METHOD – Low Frequency Pulse Width Modulation: The Sunsei™ CC20000D provides pulses of charging current at varying durations to maintain the batteries at a full state of charge and insure the long-term health on the batteries. The “on” and “off” cycle time is wide enough to eliminate electronic noise and short enough to insure the batteries are always topped off. This method allows the batteries to reach a higher voltage with the “on” cycle and protect the batteries from gassing in the “off” cycle. This will provide the benefits of the higher voltage (reduced sulfation and stirred up electrolyte) and prevent excessive gassing and excessive water loss.

A TYPICAL DAY: A typical daily cycle will be as follows. As the charging starts for the day and battery state of charge is low, charging will be continuous and the “CHARGING” light will be on all the time. As the battery charges up, current will pass into the battery for a while and eventually stop. Later, charging will resume and the system will continue this cycle throughout the day. During the course of the day, the duration of the charging period of each cycle will get shorter (cycling on for shorter periods and staying off longer). When the battery is close to full charge, it will pulse current into the battery to achieve and maintain full charge. The “CHARGING” light occasionally turning on and off indicates this pulse charging.

ARRAY AND BATTERY FUSES

ARRAY FUSE: An array fuse is included on the Sunsei™ CC20000D. It will protect the controller from over-current from the solar panels, battery short circuit and incorrect wiring problems with the system. If the fuse continued to blow after all external problems have been corrected, then this may indicate a defective unit.

Fuse type: Sunsei™ CC20000D: **25 amp AGC**

BATTERY FUSE: A battery fuse is included on the Sunsei™ CC20000D. This will protect the controller from over-current from the solar panels, reverse polarity from the batteries and a battery short circuit and incorrect wiring problem in the system. If the fuse continued to blow after all external problems have been corrected, then this may indicate a defective unit.

Fuse type: Sunsei™ CC20000D: **25 amp AGC.**

MAINTENANCE

AVOID DISCONNECTING BATTERY: Do not leave the battery disconnected from the Sunsei™ CC20000D for an extended period of time (weeks or months). If you need to, then disconnect **both** battery and array.

RECOMMENDED ANNUAL CARE: Any solar system, when designed correctly, should provide years of reliable charging with very little user involvement. To assure system reliability, an annual routine of checking the electrical connections is recommended. Especially on a moving vehicle exposed to road vibrations. Over time, electrical connections can deteriorate or corrode causing a voltage drop and possible hot-spots at the problem area.

WHAT TO CHECK: Check to confirm all wire connections are sound and free from corrosion. Tighten terminal block screws, inspect any fuse connections in-line, the array connections and battery terminals. Also, consider checking for a voltage drop. See **INSTALLATION INSTRUCTIONS – Step 17: CHECK FOR VOLTAGE DROP** (Page 8).

CHARGE SET-POINT ADJUSTMENT

CHARGE SET-POINT ADJUSTMENT SHOULD ONLY BE ATTEMPTED WITH CAUTION. IMPROPER CALIBRATION CAN RESULT IN BATTERY AND EQUIPMENT DAMAGE.

CAUTION: The standard charging set-points of the Sunsei™ CC20000D will be proper for a majority of the applications; however, the Sunsei™ CC20000D allows field adjustment of these set-points. Caution should be used. It is a common belief that increasing a set-point up will correct an under-charged battery. In fact, this adjustment will not affect the battery level but instead will cause the battery to *overcharge* once the sizing problem is corrected. For under-charged batteries, refer to **BATTERY PROBLEMS** in the **TROUBLESHOOTING** section (Page 19).

STANDARD SET-POINT: 14.4 volts for charge termination. Once the charging stops, the voltage will immediately drop to a lower voltage.

WHEN ADJUSTMENT IS NOT NEEDED:

- An adjustment will **not** make the batteries charge faster.
- An adjustment will **not** increase the output of the panels.
- An adjustment will **not** add more power to a battery that is usually undercharged.
- An adjustment is **not** recommended to correct for a voltage drop in the battery connection.

WHEN ADJUSTMENT IS NEEDED: Adjusting the charge set-points is recommended for certain situations that might otherwise result in under or overcharging the batteries. These recommendations are approximate and can be influenced by specific conditions. Contact the battery manufacturer or supplier to verify proper settings.

SOME BATTERIES REQUIRE DIFFERENT CHARGING VOLTAGES: Sealed, maintenance-free and gel-cell batteries may require a lower charging voltage. Generally, for these batteries, the controller should be set for 14.1 to 14.3 volts.

WHEN BATTERY WILL SEE PROLONGED TEMPERATURE EXTREMES: For colder areas (average temperatures below 50°F (10°C) for many weeks) the set-point should be raised .3 volts (14.7 volts). For hotter areas (average temperatures above 90° F (32°C) for many weeks) the set-point should be lowered .3 volts (14.1 volts). Be sure to return to original settings when temperature moderates.

IN SYSTEMS WITH EITHER EXTREMELY HIGH OR LOW CHARGE RATES: Systems with very low charge rates (1 amp per 100 amp hour of battery) should have the set-points lowered to about 14.0 to 14.2 volts. Systems with very high charge rates (over 20 amps per 100 amp hours of battery) should increase the charging set-point to 14.8 to 15.0 volts.

PROCEDURE

- 1. COMPLETE BATTERY CONNECTION:** Connect the battery to the Sunsei™ CC20000D according to the normal installation instructions.
- 2. SET SWITCH TO “CHARGE SET-POINT”:** Slide the front switch to the third position.
- 3. LOCATE ADJUSTMENT POT:** The adjustment pot is located on the backside of the controller on the circuit board. The adjustment pot appears as a small, square component with a slotted circle in the middle. (Refer to **FIGURE 2 - BACK VIEW**) (Page 9).
- 4. DETERMINE NEW VOLTAGE SET-POINT:** Decide on a new voltage termination set-point. Note that changing the shut-off voltage will also change the "charge resumption" set-point by an equal amount. If adjusting above 15.0 volts, check to see what the operating limits of other equipment may be, as some electrical equipment (fluorescent lights, inverter) may be damaged or not operate at voltages over 15 volts.

CHARGE SET-POINT ADJUSTMENT (continued)

5. **ADJUST POT:** Turning the pot counter-clockwise increases the set-point, clockwise decreases it. Carefully adjust the pot to change the voltage reading to the desired setting. Do not force the dial beyond the end stops.
6. **MONITOR:** After adjustment, monitor the batteries. ***For unsealed batteries:*** If you constantly need to add water, they are set too high. If you do not hear them boil once in a while, they may be too low.

MONITORING

The system operation can be monitored by the meters and the status lights.

DIGITAL DISPLAY: The Digital display of the Sunsei™ CC20000D provides metering of four parameters, selected by a front panel slide switch.

1st POSITION - "BATTERY VOLTAGE": This displays the battery voltage. The battery voltage is a general indication of battery condition or capacity. Battery voltage will be higher when the battery is being charged, with the increase in voltage depending on the amount of charge current. When charging stops, the voltage will immediately drop down.

For most systems, a fully charged battery that is not being charged or discharged will be at about 12.6-12.8 volts. The normal range of a 12 volt battery is about 11 to 15 volts. A voltage below 11 volts usually indicates a dead battery, and over 15 volts is almost always an over-charged battery. It is best to keep the batteries above 11.5 volts and below 14.5 volts for maximum battery life and performance.

2nd POSITION - "ARRAY CURRENT": This displays the amount of current flowing from the solar panels to the batteries or loads. The solar array current reading can be used to optimize the array tilt angle by moving the array and noting when current is maximized. Consult the panel supplier or literature for rated output to see what the output should be for the total number of panels in the system under ideal conditions. *If the charging current seems low, refer to the **SOLAR PANEL PROBLEMS** section (Page 18).*

3rd POSITION - "CHARGE SET-POINT": This position displays the charge termination voltage set-point that the controller is currently set to. This setting can be used to verify the termination set-point or for set-point adjustment. *See the **CHARGE SET-POINT ADJUSTMENT** section (Page 11).*

4th POSITION - "BATTERY VOLTAGE (bar-graph off)": This position is identical to the 1st position described above except that the battery bar-graph display is turned off. Use this position if current consumption is a special concern.

"CHARGING" LIGHT: The "CHARGING" light will be on when the battery is charging. When charging, virtually all the power available from the solar array will pass through to the battery.

"CHARGED" LIGHT: The "CHARGED" light will be on when the battery is fully charged. After the battery has reached the charge termination voltage, the charging will stop and the "CHARGED" light will go on. This light will remain on until the battery voltage drops down to the charge resumption voltage.

MONITORING (continued)

“BATTERY” CONDITION BAR-GRAPH: This bar-graph provides a general indication of the battery condition.

 
The lights will rise and fall as the battery voltage goes up and down. During the day, the battery voltage can increase and decrease instantly as charging is turned on and off. When the battery is completely charged, the current will begin to pulse into the battery. This may cause the bar-graph lights to rise and fall rapidly.

Bar-graph after modifying set-points – The bar-graph provides a general indication of the battery condition. These lights do not adjust if the charging set-point is modified. When charging batteries with modified set-points, the terminology and colors may not be appropriate.

Bar-graph “Dot” / Bar-graph “Bar” – The visual appearance of the bar-graph can be adjusted to meet your individual preference. The bar-graph can be set to use a single light (“Dot”) to represent the battery condition or it can be set so all the lights below the value are on (“Bar”). The bar-graph “Dot” will consume less current but the “Bar” setting will be brighter.

To change the “Dot” or “Bar” setting, locate the “BAR-GRAPH MODE” adjustment pins on the backside of the unit. For “Dot” readings, place jumper across only one of the pins. For “Bar” readings, place the jumper across both pins.

Red light glow – Occasionally, the very bottom red light may have a slight glow to it. This is not a problem.

	GOOD	Battery can generally be considered “FULL”. The lights above usually indicate when the unit is charging.
	OK	Battery is less than full. Capacity has dropped down but voltage is still adequate to provide power.
	LOW	Battery voltage is moderate to low. Use of loads should be conservative.
	VERY LOW	Voltage is very low. Reduce use of loads or use an additional source to charge the batteries. If this continues, see the TROUBLESHOOTING section (Page 14).

TROUBLESHOOTING

These sections can assist in the troubleshooting of a solar system.

- **Help Notes:** Lists some common problems with a solar system.
- **Sunsei™ CC20000D Problems:** If a problem is suspected based on the observations of the Sunsei™ CC20000D controller, find the condition on the ***Sunsei™ CC20000D Problems*** chart. It will direct you to a ***“Sunsei™ CC20000D Note”*** on the next page.
- **Fuse Removal Test:** Provides a simple test to confirm operation.
- **Battery Problems:** If you feel your batteries are not being adequately charged or are consistently being over-charged, refer to the section ***Battery Problems***.
- **Solar Panel Problems:** If you feel that the solar panels are not performing adequately, refer to the section ***Solar Panel Problems***.

Help Notes – Normal Conditions and Problem Conditions

Normal Conditions:

1. **“ALWAYS CHARGING” or “NEVER CHARGING”** - Depending on your system, it may be normal for the Sunsei™ CC20000D to go for long periods of ***constant charging*** or long periods with ***no charging***. The function of the Sunsei™ CC20000D is to prevent over-charging of the battery. Therefore, it will charge ***continuously*** when the battery voltage is low and ***stop all charging*** as long as the battery voltage is high.
2. **BATTERY WATER LOSS** - It is normal for unsealed batteries to need some water from time to time. Minor water loss is not a problem; just add to the top level when needed. Excessive water loss (a quart or more in a period of a month) may indicate a more serious problem.
3. **BATTERY GASSING** - In vented batteries, some gassing is good. Gassing stirs up the battery acid and allows the battery to fully charge. A little bubbling in the batteries is not necessarily a problem. ***Refer to BATTERY WATER LOSS above.***
4. **TEMPERATURE** - Temperature can affect the performance of batteries. They will tend to over-charge easier when hot, and will not have as much capacity when cold. Temperature can also affect the performance of the solar panels. The charging current can be substantially higher in cold conditions. When sizing the system, consider the current at cold conditions. Most panel specifications include a temperature chart.

Help Notes (continued)

Problem Conditions:

5. **SYSTEM IS NOT SIZED CORRECTLY** - The system batteries will tend to be under-charged if the solar array is too small, if the battery bank is too small, or if the usage is too high. Some systems contain small hidden loads that can slowly draw down the battery.
6. **PROBLEMS WITH SOLAR PANELS** - Solar panel output is dependent upon the amount of sun-energy reaching the panel. This can be seriously affected by the angle of the panel and sun (as in winter months), minor shading, high level haze (barely visible) and dust on the panel. At the time of installation, a solar array can have an incorrect series-parallel configuration for the proper system voltage and current. A panel can also become less productive or defective over time.
TEST: Disconnect the Sunsei™ CC20000D from the panel, and measure the voltage at panel(+) and panel(-). In sunny conditions, this should be 18-24 volts. A lower value may indicate a problem with the panel. To check the panel's current output, contact a local solar dealer.
7. **PROBLEMS WITH BATTERIES** - At the time of installation, a battery bank can have an incorrect series-parallel configuration for the proper system voltage and current. A battery can also go bad and be unable to maintain a charge. If the battery is going bad, a little charging or discharging will cause a large change in the battery voltage. Also, a shorted battery cell will cause the battery to gas heavily and the system will charge constantly with no notable increase in voltage. If the condition of the battery is suspect, a battery capacity test is recommended.
8. **BAD CONNECTION: PANEL** - The solar panel connection to the controller may be weak or completely out. Problems can be found at the Sunsei™ CC20000D connection (ARRAY (+) & ARRAY (-) terminals), both panel connections ("+" or "-"), the Array Fuse on Sunsei™ CC20000D (either blown or defective), or fuses and unsoldered crimp connectors in these lines. Also, wire that is too small for the length of the run may cause a problem. *Refer to **INSTALLATION INSTRUCTIONS – Step 17: CHECK FOR VOLTAGE DROP** (Page 8).*
9. **BAD CONNECTION: BATTERIES** - The battery connection to the controller may be weak or completely out. The Sunsei™ CC20000D needs to read an accurate battery voltage to regulate the charging correctly. Therefore, you need to minimize the voltage drop from the battery. Problems can be found with the Sunsei™ CC20000D connection (BATT (+) and BATT (-) terminals), both battery terminals ("+" or "-"), the Battery Fuse on Sunsei™ CC20000D (either blown or defective), or fuses and unsoldered crimp connectors in these lines. Also, small wire or incorrect wiring may cause a voltage drop. *Refer to **INSTALLATION INSTRUCTIONS – Step 12: Sunsei™ CC20000D CONNECTION** (Page 7) and **Step 17: CHECK FOR VOLTAGE DROP** (Page 8).*
10. **CONTROLLER MISWIRED** - This may include reversing the polarity from the panels or batteries, or switching the array and battery connections. This may also include a deviation from the wiring instructions, such as using a jumper across the BATTERY(-) & ARRAY(-) connections or by having your battery(-) connection run to a frame or chassis and not the actual battery itself. *Refer to **INSTALLATION INSTRUCTIONS – Step 12: Sunsei™ CC20000D CONNECTION** (Page 7).*
11. **INCORRECT VOLTAGE SET-POINT** - The Sunsei™ CC20000D may be functional but the charge termination set-point may not be correct for your batteries. The factory set-point is 14.4 volts and is designed to work for the majority of batteries. Set the front panel switch position to "CHARGE SET-POINT" and verify set-point. *Refer to the **CHARGE SET-POINT ADJUSTMENT** section (Page 11) and consider if an adjustment may be necessary.*
12. **SYSTEM NOISE** - The Sunsei™ CC20000D can be affected by electrical noise from a converter or inverter. This will not affect the charging function but will cause erratic meter readings. If the Sunsei™ CC20000D is connected to a bus that is connected to a converter, try connecting the Sunsei™ CC20000D directly to the battery instead.
13. **CONTROLLER DEFECTIVE** - The Sunsei™ CC20000D may no longer be functional. A defective unit can overcharge the battery or stop all charging. **A faulty unit can not drain a battery.** It may have been exposed to high voltage or current, reverse polarity from the batteries or other wiring problem.

Sunsei™ CC20000D Problems: Refer to this chart and the **SOLAR PANEL PROBLEMS** section (Page 18) to help diagnose problems based on the Sunsei™ CC20000D readings.

CASE	BATTERY VOLTAGE READING	ARRAY CURRENT READING	YELLOW CHARGING LIGHT	GREEN CHARGED LIGHT	OTHER	Sunsei™ CC20000D NOTE
1 →	Display blank	Display blank			Day	See Note 1
2 →	Display blank	Display blank			Night only	See Note 2
3 →	10-13	00.0	OFF		Day	See Note 3
4 →	12.0-14.7	00.0	ON	ON	Day	See Note 4
5 →	13-14.7	00.0	ON		Day	See Note 5
6 →	14.7 - 22.0		ON			See Note 6
7 →			ON at night		Night	See Note 7
8 →	Reading changing rapidly	Reading changing rapidly	May be flashing	May be flashing	Day	See Note 8
9 →	Bad display readings	Bad display readings				See Note 9
10 →	Voltage reading higher than actual battery voltage					See Note 10
11 →		Current less than expected			Day	See Note 11
12 →			Changes to ON or OFF	Changes to ON or OFF	Day – When fuse is touched	See Note 12
13 →					Day –Sunsei™ CC20000D buzzing	See Note 13
14 →					Sunsei™ CC20000D hot	See Note 14
15 →					Bar-Graph off	See Note 15
16 →					Fuse keeps blowing	See Note 16

Sunsei™ CC20000D PROBLEM NOTES (from Sunsei™ CC20000D PROBLEMS chart)

Note 1 - A display blank both day and night may indicate...

- A bad connection exists to the solar panel (See **BAD CONNECTION: PANEL** (Help Note 8)) and the battery has either a bad connection (See **BAD CONNECTION: BATTERY** (Help Note 9)) or the battery is low in voltage (the meter requires 10 volts to operate).
- The Sunsei™ CC20000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).

Note 2: - A display that is only blank at night may indicate...

- A bad connection exists to the battery. See **BAD CONNECTION: BATTERY** (Help Note 9).
- A blocking diode or diode isolator exists in the battery connection. If there is a blocking diode, remove it. If there is a diode isolator, modify the system so the Sunsei™ CC20000D charges only one battery bank.

Note 3 - A low voltage condition with no daytime charging may indicate...

- The system has no panel input. See **BAD CONNECTION: PANEL** (Help Note 8)
 - The charge set-point has been set very low. See **INCORRECT VOLTAGE SET-POINT** (Help Note 11)
 - The Sunsei™ CC20000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).
- TEST:** Perform the **BATTERY FUSE REMOVAL TEST** (Page 18)

Note 4 - The “CHARGING” and “CHARGED” lights on is caused by a bad battery connection. See **BAD CONNECTION: BATTERY** (Help Note 9).

Sunsei™ CC2000D PROBLEM NOTES (continued)

Note 5 - The "CHARGING" light on with 00.0 amps from the array may indicate...

- A condition exists of very low levels of light to the panels
- A system problem. This would be a panel, connection or wiring problem. Often, this happens when the negative connections from the array and battery are connected. Refer to **INSTALLATION INSTRUCTIONS – Step 12: Sunsei™ CC2000D CONNECTION** (Page 7).
- The Sunsei™ CC2000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).
TEST: Perform the **BATTERY FUSE REMOVAL TEST** (Page 18)

Note 6 - High voltage with the "CHARGING" light on may indicate...

- A bad connection exists to the battery. See **BAD CONNECTION: BATTERY** (Help Note 9).
- The charge set-point is set very high. See **INCORRECT VOLTAGE SET-POINT** (Help Note 11)
- The Sunsei™ CC2000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).
TEST: Perform the **BATTERY FUSE REMOVAL TEST**. (Page 18)

Note 7 - The "CHARGING" light can be on (bright to dim) at night if the panels are under even very low levels of light (moonlight or street lights). The "CHARGING" light on brightly at night may also indicate...

- The unit is mis-wired. Refer to **INSTALLATION INSTRUCTIONS – Step 12: Sunsei™ CC2000D CONNECTION** (Page 7).
- There is a blocking diode located within the solar panels or in the panel connection. This is not a serious problem, but should be removed if possible.
- The Sunsei™ CC2000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).
TEST: Disconnect the panel (ARRAY (+)), if the light goes off, then it may be possible that the panel is receiving enough light for a slight charge, or a diode exists in the connection.

Note 8 – The display readings and status lights changing rapidly may indicate...

- A normal condition. If the battery is fully charged and the array has a lot of additional charge current, the controller can pulse on and off rapidly, especially when current is being used by a load. This is OK.
- A bad connection exists to the battery. See **BAD CONNECTION: BATTERY** (Help Note 9).
- A problem exists with the battery. The battery bank is bad or too small. See **PROBLEMS WITH BATTERIES** (Help Note 7)
TEST: Take an accurate voltage reading at the battery. If this voltage reading stays steady while the reading on the Sunsei™ CC2000D goes up and down, then suspect a bad battery connection. If the voltage here also moves up and down rapidly, this would indicate either a normal condition or a battery problem.

Note 9 - A bad display readings may indicate...(display issues don't affect the charging functions)

- System noise. Digits is OK, but the readouts are erratic. See **SYSTEM NOISE** (Help Note 12)
- A Defective unit. Digits is OK, erratic readouts and a correlation to high humidity exists.
- A Defective unit. If the quality of the digits are bad with missing segments or black background areas.

Note 10 - A voltage reading that is a lot higher than the actual battery voltage is caused by a bad battery connection. Somewhere it could be corroded or loose. If you recheck at night or disconnect the panel, the difference should go away. See **BAD CONNECTION: BATTERY** (Help Note 9).

Note 11 - If the charge current seems too low for your panels, refer to the SOLAR PANEL PROBLEMS section (Page 18). Also, check to see that there is not an alternative path from the solar panel negative to the battery negative other than through the Sunsei™ CC2000D.

Note 12 - The charge control circuit will reset when power is removed. Touching or removing the battery fuse will momentarily lose power to the control circuit, causing it to reset. It will usually reset "CHARGING". This is normal and does not indicate a problem.

Note 13 - The buzzing sound is caused by the controller rapidly switching on and off and is the result of a bad battery connection. See **BAD CONNECTION: BATTERY** (Help Note 9).

Note 14 - The Sunsei™ CC2000D may get warm during normal operation. When operating near maximum ratings, the front plate gets very warm. If the unit should get too hot to touch, it may be defective. See **CONTROLLER DEFECTIVE** (Help Note 13).

Note 15 – If the bar-graph goes off, confirm that the slide switch is set to the top position. Also, look at the battery voltage. If it is below 10.5 volts, the bar-graph will not light.

Note 16 – If the fuses continuously blow, refer to the ARRAY & BATTERY FUSE section (Page 10).

Fuse Removal Test: (checks operation)

This test temporarily removes the battery connection to the Sunsei™ CC20000D. The new voltage display will indicate if the unit is working properly. Note: when the fuse is removed, it is normal for the front lights to both go on and to hear a faint buzzing. Remember to replace the fuse immediately after testing.

Procedure: During a sunny period when the battery voltage is over 10 volts, remove the *BATTERY* fuse. Note the "BATTERY VOLTAGE" reading. Compare the reading to the options below.

- **VOLTAGE READS FROM 10.0 TO 15.0 VOLTS** - If the new reading is in this range, perform another step. Note the exact voltage value. Replace the fuse. Now, again note the value. Did the value change ?
 - **VOLTAGE: 10 - 15V. AND CHANGES WITH FUSE REMOVAL** - *This is the correct reaction and the unit is working properly.*
 - **VOLTAGE: 10 - 15V. AND READING DOES NOT CHANGE WITH FUSE REMOVAL** - If the meter stays the same before and after removing the fuse, this indicates the Sunsei™ CC20000D may not be connected to the battery. See **BAD CONNECTION: BATTERY** (Help Note 9).
- **BATTERY VOLTAGE READING IS BLANK** - If the meter is blank, this means that the solar array is bad or disconnected or that the Sunsei™ CC20000D is defective. If possible, perform this step. Disconnect the array(+) connection at the Sunsei™ CC20000D. With a volt meter, measure the voltage of the array by measuring the array wires where they meet the Sunsei™ CC20000D.
 - **VOLTAGE DISPLAY BLANK AND ARRAY VOLTAGE AT Sunsei™ CC20000D IS ZERO** - This indicates that there is a problem with the array or array connection. See **PROBLEMS WITH SOLAR PANELS** (Help Note 6) and **BAD CONNECTION: PANEL** (Help Note 8).
 - **VOLTAGE DISPLAY BLANK AND ARRAY VOLTAGE GREATER THAN 16V.** - This indicates that the array is OK but the Sunsei™ CC20000D has a bad ARRAY fuse or the Sunsei™ CC20000D is defective. See **CONTROLLER DEFECTIVE** (Help Note 13).
- **VOLTAGE READING IS GREATER THAN 16.0 VOLTS** - This would indicate that the Sunsei™ CC20000D is defective. The meter is displaying the panel voltage, which is usually about 16-22 volts. See **CONTROLLER DEFECTIVE** (Help Note 13).

Solar Panel Problems: Refer to this section to help diagnose problems based on panel performance.

<u>CASE</u>	<u>PANELS</u>	<u>SEE NOTE(S)</u>
1 →	Less charge current than expected	See Panel Note 1
2 →	Less voltage than expected	See Panel Note 2

Panel Note 1 - The panels should generate a charge close to their rated short circuit current as presented in their specifications. To reach this level assumes that all conditions are ideal. If the panel performance as measured on the Sunsei™ CC20000D controller is much lower, consider the following:

- **Solar Panels Problem** - Panels are dirty, not aligned or other problem. See if the "ARRAY CURRENT" reading improves after cleaning the panels and adjusting their orientation. Locate the panel where no shadows will cross it. See **PROBLEMS WITH SOLAR PANELS** (Help Note 6).
- **Bad Connection to the Solar Panel** - See **BAD CONNECTION: PANEL** (Help Note 8).
- **Temperature Issues** – Panel performance varies with temperature (better when cold). See **TEMPERATURE** (Help Note 4)

Panel Note 2 - Ideally, a disconnected solar panel should measure 18-24 volts. A lower voltage, under ideal conditions, may indicate a defective panel. See **PROBLEMS WITH SOLAR PANELS** (Help Note 6). Once a solar panel is connected to a battery, the panel voltage will immediately drop down to match the battery voltage. This is normal.

Battery Problems: Refer to this section to help diagnose problems based on battery observations.

CASE	BATTERY	SEE NOTE(S)
1 →	Seems to be over-charging	See Battery Note 1
2 →	Does not fully charge batteries (or) Does not hold a charge	See Battery Note 2

Battery Note 1 - BATTERY OVER-CHARGING: If there is evidence that the batteries have been over-charging, consider the following:

- **Normal Battery Condition:** The batteries may not be over-charging but only be experiencing normal water loss and normal levels of gassing. Check the “BATTERY VOLTAGE” reading. Normal battery voltage for a wet cell battery can be up to 14.6 volts. See **BATTERY WATER LOSS and GASSING** (Help Notes 2 and 3)
- **Controller Problem:** The Sunsei™ CC20000D could be defective. Perform the **FUSE REMOVAL TEST** (Page 18). Determine if the Sunsei™ CC20000D is working properly. Check for **INCORRECT VOLTAGE SET-POINT** (Help Note 11)
- **Batteries Need Lower Set-point:** The batteries may require a lower full-charge voltage. Refer to **INCORRECT VOLTAGE SET-POINT** (Help Note 11).
- **Other Charging Sources:** Another charging source could be the cause. If the Sunsei™ CC20000D is not charging, the overcharging may be from another source. Some 110 volt battery chargers are not well regulated and could over-charge batteries if left unattended.
- **A Hot Battery** - Hot temperatures can affect the battery charging. A hot location for batteries will tend to over-charge the batteries. See **TEMPERATURE** (Help Note 4).

Battery Note 2 - BATTERY UNDER-CHARGED: If the battery voltage is often low or the battery voltage drops fast after charging, consider the following:

- **System not sized correctly** - See Help Note 5. For too much usage, try charging the battery with another charging source (engine alternator, generator or AC battery charger). If the batteries charge okay and hold the charge, an increase in the number batteries and panels may be needed to support the usage.
- **Solar Panels Problem** - Panel may be dirty, not aligned or other problem. See **PROBLEMS WITH SOLAR PANELS** (Help Note 6)
- **Bad Connection** – A bad connection can reduce the charge. See **BAD CONNECTION: PANEL and BATTERIES** (Help Notes 8 & 9)
- **Sunsei™ CC20000D Controller Problem** - Perform the **FUSE REMOVAL TEST** (Page 18). Also, refer to the **Sunsei™ CC20000D PROBLEM** section. Examine the readings from the Sunsei™ CC20000D meter to see if they indicate a problem.
- **A Bad Battery** - The batteries may be going bad. See **PROBLEMS WITH BATTERIES** (Help Note 7).
- **A Cold Battery** - Cold temperatures can affect the battery charging. If the battery is cold much of the time, the battery’s long-term performance and life may suffer. See **TEMPERATURE** (Help Note 4).

LIMITED TWO-YEAR WARRANTY

(Warranty terms effective as of October 1, 2005)

1. ICP Solar Technologies warrants all its products for a period of two (2) years from the date of shipment from its factory. This warranty is valid against defects in materials and workmanship for the two (2) year warranty period. It is not valid against defects resulting from, but not limited to:
 - a. Misuse and/or abuse, neglect or accident.
 - b. Exceeding the unit's design limits.
 - c. Improper installation, including, but not limited to, improper environmental protection and improper hook-up.
 - d. Acts of God, including lightning, floods, earthquakes, fire and high winds.
 - e. Damage in handling, including damage encountered during shipment.
2. This warranty shall be considered void if the warranted product is in anyway opened or altered. The warranty will be void if any eyelet, rivets, or other fasteners used to seal the unit are removed or altered, or if the unit's serial number is in any way removed, altered, replaced, defaced or rendered illegible.
3. The two (2) year term of this warranty does not apply to equipment where another manufacturers' warranty is available. An example of such equipment may be, but is not limited to, an electronic enclosure. The time limit for this warranty may be for less than the ICP Solar limited warranty. ICP Solar will assist the claimant in attempts to seek warranty claims for such equipment, where appropriate.
4. ICP Solar cannot assume responsibility for any damages to any system components used in conjunction with ICP Solar products, nor for claims for personal injury or property damage resulting from the use of ICP Solar products, the improper operation thereof, or consequential damages arising from the products or use of the products.
5. ICP Solar cannot guarantee compatibility of its products with other components used in conjunction with ICP Solar products including, but not limited to, solar controllers, batteries and system interconnects, and such loads as inverters, transmitters and other loads that produce "noise" or electromagnetic interference, in excess of the levels to which ICP Solar products are compatible.
6. Warranty repair and/or evaluation will be provided only at the Montreal, Canada facility of ICP Solar. Units for such repair and/or evaluation must be returned freight prepaid to ICP Solar with a written description of any apparent defects. ICP Solar will not be required at any time to visit the installation site wherein its products are subject to warranty repair and/or evaluation.
7. Only ICP Solar is authorized to repair any of its products, and reserves the right to repair or replace any unit returned for warranty repair. The party returning a unit for repair is responsible for proper packaging and for shipping and insurance charges, as well as any other charges encountered in shipping to and from ICP Solar.
8. This warranty supersedes all other warranties and may only be modified by statement, in writing, signed by ICP Solar.

WARRANTY SERVICE

Register your warranty online at www.icpsolar.com/warranty
and enter to win an ICP Solar product.

If warranty service is required, please contact the dealer or distributor who sold you the controller. For further assistance, contact ICP Solar customer service at customers@icpsolar.com.

Please note that ICP Solar will not accept returns without prior authorization. The original proof of purchase is required for warranty validation.

Sunsei™ is a trademark of ICP Solar Technologies Inc.



ICP Solar Technologies
Montreal, Canada
T - 1 514.270.5770

7673-1064-1701 (REV.1)